

Thanks for purchasing a **nebolink**!

Your **nebolink** is designed to start logging when your boat moves, and to end logging when your boat stops. Your logs are emailed to you and saved in the Nebo app.

Installing a **nebolink** is a quick and easy process. If you're happy connecting a low voltage DC device, you probably won't need to call on a marine electrician.

There are four key components inside a **nebolink**:

The **GPS** determines your boat's position whilst underway.

The **accelerometer** detects initial movement and 'wakes up' the GPS.

The **SIM card** allows your location to be transmitted to Nebo.

The **battery** provides backup if power is lost.

Please read these instructions *before* you install your nebolink.

SIM Card

Your **nebolink** comes with a SIM card already in place **(A)**.

Battery

Connect the battery lead **B** into socket **C**. It only fits one way! You should see a red LED start to flash, provided the battery still has charge.

Seal the Lid

In order for the unit to be waterproof, you need to carefully seal the lid.

The seal should be lying flat in the main housing, without any visible dust or dirt.

Put the lid in place, making sure the battery cable won't be pinched.

Hand tighten the supplied screws uniformly, and tighten the gland around the external black cable.



Connect to Power

Your **nebolink** should be powered by a constant DC power source of between 8 and 36 volts, so that the battery remains charged.

Connect the **RED** wire to the power source (+)

Connect the **BLACK** wire to ground (-)

Recommended option for motor boats kept on the water

Some vessel's initial movement may not be detected by the accelerometer, leading to a delayed start to logging. If you have a motor boat kept on the water, consider connecting the **white** wire to a circuit that is live when you're underway, like an ignition circuit (connecting to a tacho may be an easy option).

This will result in logging commencing when the engine(s) are started, and will finish when they are turned off.

Mounting

Your **nebolink** can be placed inside a locker or the dashboard, but keep in mind that reception from the GPS satellites is required. Mounting deep in the engine room isn't a good idea!

Finally, register your device in the Nebo app

If you haven't already, download Nebo and register your boat.

Open Nebo and tap **Other > Profile > My Boats**, and tap your boat's name.

Scroll to the bottom and tap **Configure nebolink**.

Enter the **nebolink** Serial Number (you'll find it on the back of the **nebolink**, and also on the box it was shipped in).



***Important:** If you keep your boat on land tick "Trailer Boat" and tap **Save**.*

You can also choose to be alerted if the **nebolink** is disconnected from your boat's power circuit, or when voltage on that circuit falls below a threshold.

When you're ready, exit and restart Nebo.

That's it. See you on the water!